


TORQUE SWIVEL

Model No. : CW58

This TORQUE SWIVEL is used to keep required tensility of conductor or wire when stringing works for overhead conductors. Such as the torque swivel will stop turning when tensility of the conductor reached at more than 100kgf while the torque swivel is now turning when the tensility will be under 100kgf to prevent unwinding or twisting of the conductor or wire.



LAY - OUT

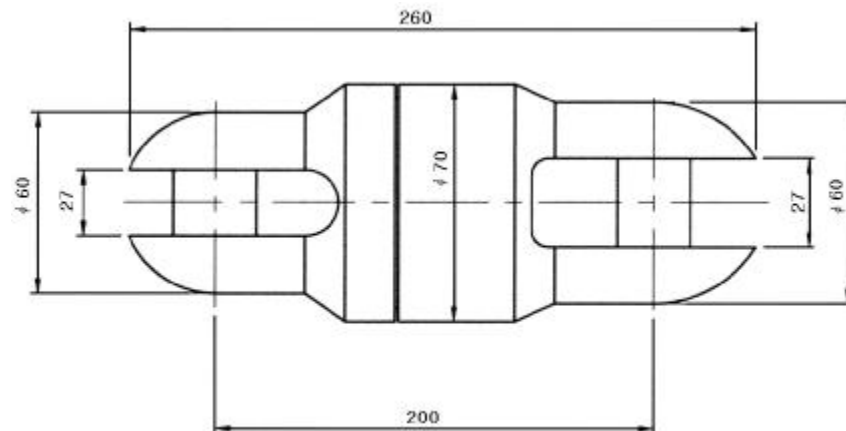

SPECIFICATION

1. Wire dia. : Less than 18 mm
2. Working Load : 5,000 kgf
3. Weight : 2.6 kg